

# Instruction and Safety Manual

## Field Hunter Elite XL Laydown Blind

Model: HB-120

[www.candsglobal.us.com](http://www.candsglobal.us.com)

### WARNING

For your safety, be sure to read all instructions carefully.

#### CARTON CONTENTS:

- Hunting Blind Part # HB-120
- Frame Support Bar Part # 1208

Please inspect the shipping carton for damage or evidence that it may have been opened before you received it. Then inspect your hunting blind carefully. Compare it to the picture on the product label and the picture illustration in your instructions. If for any reason you are not satisfied with the product, do not use it until the problem is corrected.



Store your blind in a cool dry place, free of native brush, dirt and any debris.

Never store blind wet or damp.

Avoid leaving blind outdoors for any extended period of time. Prolonged exposure to sunlight may cause fabric to fade.

Never allow children to play with this product without adult supervision.

Never allow material to cover your face. It can cause suffocation and death.

Never allow anyone to use lighted candles, matches or other sources of fire near this product.

Never use a heater in this blind. Unvented fumes could cause sickness or death.

Never expose this blind to any open flame. This product is not fireproof.

#### REPLACEMENT PART

- Frame Support Bar Part # 1208

#### • WARNING •

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT. THIS TENT MEETS THE FLAMMABILITY REQUIREMENTS OF CPAI-84.

FABRIC WILL CATCH FIRE IF EXPOSED TO FLAME

THIS TENT IS MADE WITH FLAME RESISTANT FABRIC. IT IS NOT FIRE PROOF.

THIS FABRIC WILL BURN IF LEFT IN CONTINUOUS CONTACT WITH ANY FLAME/EXTREME HEAT SOURCE.

THE APPLICATION OF ANY FOREIGN SUBSTANCE TO THE FABRIC MAY RENDER THE FLAME RESISTANT PROPERTIES INEFFECTIVE.

#### • ADVERTENCIA •

MANTENER TODO TIPO DE FUEGO Y SISTEMAS DE CALOR LEJOS DE LA TELA DE ESTA TIENDA DE CAMPAÑA.

ESTA TIENDA CUMPLE LOS REQUISITOS DE LA INFLAMABILIDAD DE CPAI-84. LA TELA PUEDE PRENDER EN FUEGO SI SE EXPONE.

ESTA TIENDA DE CAMPAÑA ESTA HECHA CON TELA RESISTENTE AL FUEGO.

NO ES TOTALMENTE RESISTENTE AL FUEGO.

ESTA TELA SE QUEMA SI SE DEJA EN CONTACTO CONTINUO CON CUALQUIER SISTEMA DE CALOR EXTREMO Y DE FUEGO.

LA APLICACIÓN DE CUALQUIER SUSTANCIA EXTRAÑA A LA TELA PUEDE RENDIR LAS PROPIEDADES DE RESISTENCIA AL FUEGO INEFICAZ.

#### • MISE EN GARDE •

TENIR LE TISSU DE CETTE TENTE LOIN DE TOUTE FLAMME ET DE TOUTE SOURCE DE CHALEUR.

CETTE TENTE RÉPOND AUX EXIGENCES D'INFLAMMABILITÉ DE CPAI-84

Cette tente est fabriquée d'un tissu résistant au feu, mais qui n'est pas ininflammable.

Ce tissu brûlera s'il est laissé en contact continu avec une source d'inflammation.

Images used are for demonstration purposes only and may not depict the actual product.

## SET-UP

1. Familiarize yourself with your blind and release the clips holding it closed.



2. Unfold blind and set frame support bar to the side.



3. Slide together rear corner frame bars. Ensure they are secure as the push button will snap in place. Slide frame support bar into rear corner frame bars to complete rear assembly.



4. Slide together lower frame bars. Ensure they are secure as the push button will snap in place. The height of the frame can be adjusted by selecting your preferred height.



5. Pull seat pad up and secure to frame. Secure blind fabric to frame as shown.



5. Secure headrest pad to blind. Blind is now ready for use.



To collapse, reverse this process.

Images used are for demonstration purposes only and may not depict the actual product.