

Universal Tree Stand Cover

Tree Stand Accessory

Model: USC-040

www.candsglobal.us.com

WARNING

You must wear a Fall Arrest System (FAS) at all times while the stand is in use, including climbing and descending. Failure to use a Fall Arrest System could result in serious injury or death.



Please inspect the shipping carton for damage or evidence that it may have been opened before you received it. Then inspect your tree stand cover carefully. Compare it to the picture on the product label and the picture illustration in your instructions. If for any reason you are not satisfied with the product, do not use it until the problem is corrected. You must check and tighten all bolts before each use.

CARTON CONTENTS:

A	1 Front Rail	Part # 1600
B	1 Rear Rail	Part # 1601
C	1 Center Roof Support	Part # 1608
D	2 Sleeve	Part # 1602
E	2 Rail Support Brace	Part # 1603
F	2 Leveling Support Bracket	Part # 1609
G	1 Tree Brace	Part # 1604
H	1 Fabric Cover Camo	Part # 040
I	2 Push Button Strap	Part # CSS-1930
	4 6mm x 1-1/2 inch bolt	Part # 1084
	2 6mm x 1-3/4 inch bolt	Part # 1080
	3 6mm x 2-1/4 inch bolt	Part # 1086
	1 6mm quick bolt	Part # 1087
	9 6mm locknut	Part # 1019
	1 6mm wing nut	Part # 1088
	2 6mm plastic washer	Part # 1089

WARNING

You must check all straps for proper threading. Refer to the instruction for each individual strap.

WARNING

You must replace all straps (ratchet, cinch, stabilizing) every year. Use only C & S Global Imports replacement straps. Any other straps will be viewed as a modification to the stand. Modifications will void the warranties and relieve C & S Global Imports from all liabilities.

It is recommended that you lubricate all hardware annually or as needed. It is recommended that you replace all hardware (locknuts and bolts) on your tree stand cover every three years.

You must check all straps for proper threading. Refer to the instruction for each individual strap.

• WARNING •

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS FABRIC. THIS FABRIC MEETS THE FLAMMABILITY REQUIREMENTS OF CPAI-84.

FABRIC WILL CATCH FIRE IF EXPOSED TO FLAME. THIS FABRIC IS MADE WITH FLAME RESISTANT FABRIC. IT IS NOT FIRE PROOF. THIS FABRIC WILL BURN IF LEFT IN CONTINUOUS CONTACT WITH ANY FLAME/EXTREME HEAT SOURCE. THE APPLICATION OF ANY FOREIGN SUBSTANCE TO THE FABRIC MAY RENDER THE FLAME RESISTANT PROPERTIES INEFFECTIVE.

• ADVERTENCIA •



MANTENER TODO TIPO DE FUEGO Y SISTEMAS DE CALOR LEJOS DE LA TELA DE ESTA TIENDA DE CAMPAÑA. ESTA TIENDA CUMPLE LOS REQUISITOS DE LA INFLAMABILIDAD DE CPAI-84. LA TELA PUEDE PRENDER EN FUEGO SI SE EXPONE. ESTA TIENDA DE CAMPAÑA ESTA HECHA CON TELA RESISTENTE AL FUEGO. NO ES TOTALMENTE RESISTENTE AL FUEGO. ESTA TELA SE QUEMA SI SE DEJA EN CONTACTO CONTINUO CON CUALQUIER SISTEMA DE CALOR EXTREMO Y DE FUEGO. LA APLICACIÓN DE CUALQUIER SUSTANCIA EXTRAÑA A LA TELA PUEDE RENDIR LAS PROPIEDADES DE RESISTENCIA AL FUEGO INEFICAZ.

• MISE EN GARDE •


TENIR LE TISSU DE CETTE TENTE LOIN DE TOUTE FLAMME ET DE TOUTE SOURCE DE CHALEUR. CETTE TENTE RÉPOND AUX EXIGENCES D'INFLAMMABILITÉ DE CPAI-84. CETTE TENTE EST FABRIQUÉE D'UN TISSU RÉSISTANT AU FEU, MAIS QUI N'EST PAS ININFLAMMABLE. CE TISSU BRÛLERA S'IL EST LAISSÉ EN CONTACT CONTINU AVEC UNE SOURCE D'INFLAMMATION.

ASSEMBLY


1. Bolt tree brace (G) to rear rail (B) using one 6mm x 2-1/4 inch bolt and secure with one 6mm locknut. Bolt leveling support brackets (F) to tree brace (G) as shown using two 6mm x 2-1/4 inch bolts and secure with two 6mm locknuts. Slide sleeves (D) onto front rail (A) and bolt using two 6mm x 1-1/2 inch bolts and two 6mm locknuts. Bolt center roof support (C) to sleeves (D) using two 6mm x 1-1/2 inch bolts and two 6mm locknuts. Hand tighten all bolts.

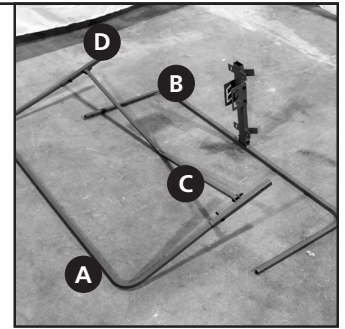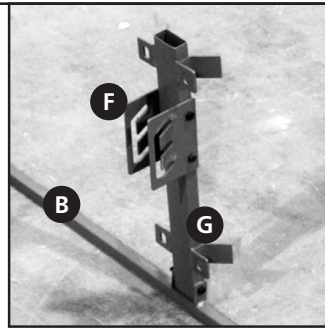

2. Connect rail support braces (E) to leveling support brackets (F) with 6mm x 3-3/4 quick bolt and 6mm wingnut. Slide sleeves onto rear rail, align rail support braces and bolt together using two 6mm x 1-3/4 inch bolts, two plastic washers and two 6mm locknuts. Plastic washers will go between the sleeves and the rail support braces. Tighten all bolts securely.


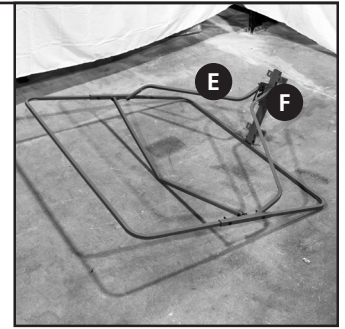


3. Drape fabric cover (H) and insert corners of frame into cover pockets. Secure fabric cover to frame using the attached straps with buckles. Ensure the straps go around the outside of the frame. Refer to the instructions for proper threading. Attach tree stand cover to the tree about two feet above your head with two push button stabilizing straps (I). Pull the strap tight until the strap is tight and the tree stand cover is secure to the tree.

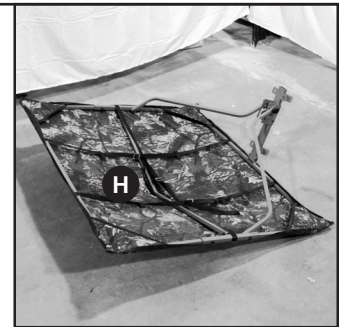

PUSH BUTTON BUCKLE THREADING INSTRUCTIONS

1. Hold the strap in one hand and the buckle in the other hand. (P1)
2. Push button down on cam buckle and thread strap up through bottom of cam buckle. (P2, P3)

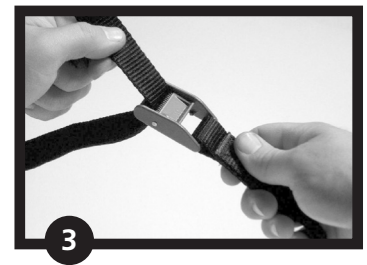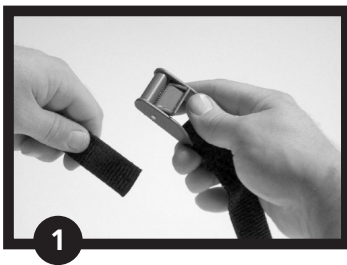

METAL BUCKLE THREADING INSTRUCTIONS

1. Hold the strap in one hand and the buckle in the other hand. (P1)
2. Push strap up through back slot, loop back over center bridge and back through toothed slot, then adjust strap till fabric cover is snug against rails. (P2, P3)



When calling for parts, always give the following information to the customer service representative: 1) Proof of Purchase 2) Model Number 3) Part Description and Part Number 4) Quantity 5) Reason for Replacement • Hours of Operation: 9am-4:30pm Central Time • (309) 676-7930